

# Installation and Maintenance Manual

MRPW-03

## Performa™ Winch 50.2 STP



**HARKEN®**

|  |    |
|--|----|
| <b>Introduction</b>                            | 3  |
| <b>Technical characteristics</b>               | 3  |
| <i>Weight</i>                                  | 3  |
| <i>Maximum working load</i>                    | 3  |
| <b>Outline</b>                                 | 3  |
| <b>Installation</b>                            | 4  |
| <i>Installation procedure</i>                  | 6  |
| <i>Positioning the self-tailing arm</i>        | 7  |
| <b>Maintenance</b>                             | 7  |
| <i>Washing</i>                                 | 7  |
| <i>Maintenance table</i>                       | 7  |
| <i>Disassembly procedure</i>                   | 7  |
| <i>Exploded view with maintenance products</i> | 11 |
| <i>Assembly</i>                                | 12 |
| <b>Harken® limited worldwide warranty</b>      | 13 |
| <b>Ordering spare parts</b>                    | 13 |
| <b>Exploded view</b>                           | 14 |
| <b>Parts list</b>                              | 16 |

## Introduction

This manual gives technical information on winch installation and maintenance, including disassembling and reassembling.

This information is DESTINED EXCLUSIVELY for specialised personnel or expert users.

Installation, disassembling and reassembling of the winch by personnel who are not experts may cause serious damage to users and those in the vicinity of the winch.

Harken® accepts no responsibility for defective installation or reassembly of its winches.

In case of doubt the Harken® Tech Service is at your disposal at [techservice@harken.it](mailto:techservice@harken.it)

This Manual is available only in English. If you do not fully understand the English language, do not carry out the operations described in this Manual.

## Technical characteristics

|           | Power ratio | Gear ratio |
|-----------|-------------|------------|
| 1st speed | 10,90 : 1   | 2,40 : 1   |
| 2nd speed | 50,40 : 1   | 10,90 : 1  |

*The theoretical power ratio does not take friction into account.*

### Weight

|             | ST Version |
|-------------|------------|
| Weight (Kg) | 6,0        |


### Maximum working load



#### **WARNING!**

The maximum working load (MWL) for the 50.2 ST Performa™ Winch is 1450Kg (3197 lb). Subjecting the winch to loads above the maximum working load can cause the winch to fail or pull off the deck suddenly and unexpectedly during high loads causing severe injury or death.

## Outline

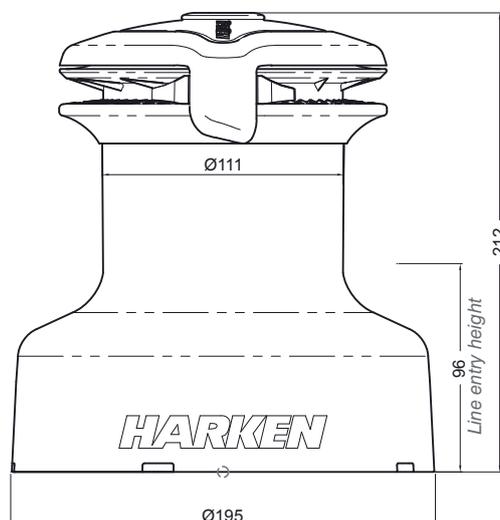

## Installation

The winch must be installed on a flat area of the deck, reinforced if necessary to bear a load equal to at least twice the maximum working load of the winch.

It is the installer's responsibility to carry out all structural tests needed to ensure that the deck can bear the load.

Harken® does not supply the screws needed to install the winch since these may vary depending on the deck on which it is to be installed.

It is the installer's responsibility to choose the correct screws taking account of the loads they will have to bear.

Harken® assumes no responsibility for incorrect installation of its winches or for an incorrect choice of mounting screws.



### DANGER!

Incorrect installation of the winch may cause severe injury or death. Consult the yard that built the boat in the case of doubt over the correct positioning of the winch.




### WARNING!

Failure to use the correct number and type of mounting fasteners or failure to ensure the correct deck strength can result in the winch pulling off the deck suddenly and unexpectedly during high loads causing severe injury or death.



### WARNING!

Verify the entry angle of the sheet. This must be  $8^\circ$  with tolerance of  $\pm 2^\circ$ , to avoid sheet overrides and damaging the winch or making the winch inoperable leading to loss of control of the boat which can lead to severe injury or death.

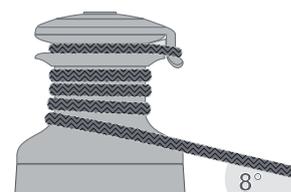

### WARNING!

Mount the winch on the deck so that the drive gear is positioned where the sheet enters the winch drum. Incorrect position of drive gear can weaken winch leading to failure which can cause an accident leading to severe injury or death.



Once you have chosen the correct mounting position for the winch on the deck proceed with installation.

## Procedure

To install the winch you must remove the drum and use Socket Head (SH) bolts.

Tools needed

 One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.

 Torque to apply when assembling



1. Unscrew the central screw ( 2Nm/18 in-lb)



2. Slide off the assy socket n°29 and the cover n°28



3. Unscrew the three screws n°27 ( 4Nm/35 in-lb)



4. Remove the stripper arm n°26 by rotating and lifting it.



5. Lift off the drum n°23

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 3. (See paragraph on installation)


## Installation procedure

Carry out the **Procedure**, then install the winch on the deck in the chosen position.

- A.** Position the base of the winch on the deck and mark the position of the holes or use the drilling cut-out template at the point where you have decided to place the winch.

Below is a reduced scale diagram.

The drilling cut out template is available on the Harken® website, [www.harken.com](http://www.harken.com)

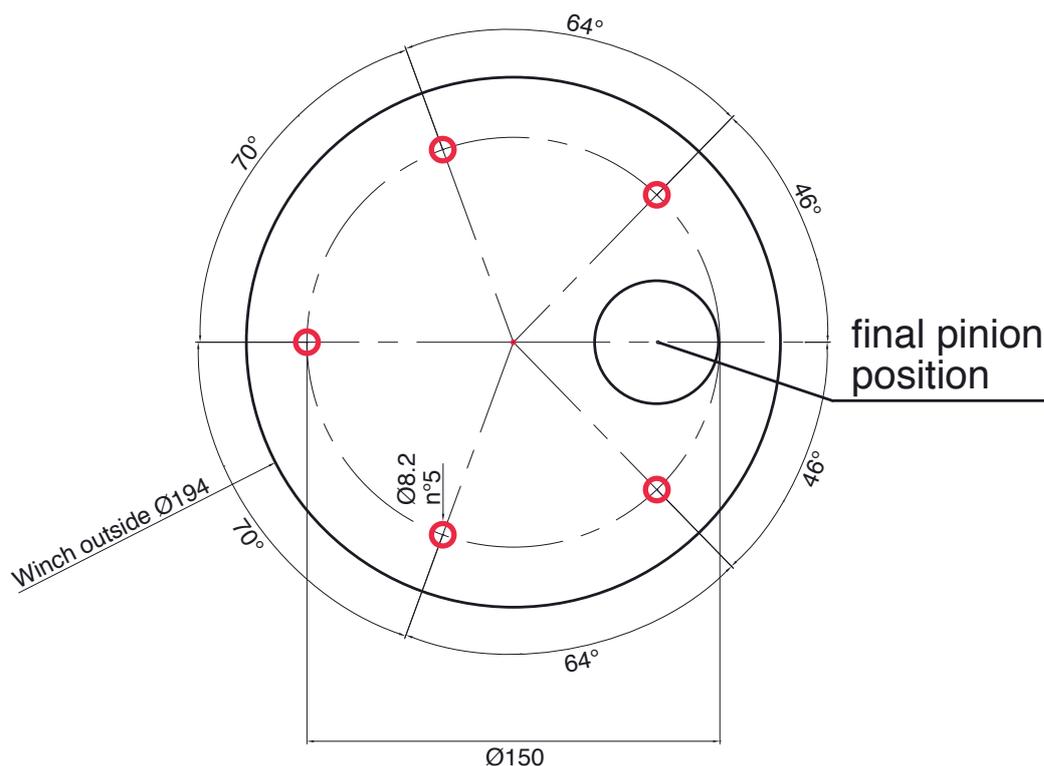

- B.** Remove the winch and drill the five 8.2 mm diameter holes.

- C.** Bolt the base of the winch to the deck using five M8 Socket Head (SH) bolts (not supplied by Harken®), correctly chosen for the thickness and type of the boat deck. Consult the yard that built the boat in case of doubt.



### **WARNING!**

To install the winch on the deck, use only bolts in A4 stainless steel (DIN 267 part11). Bolts made of other materials may not have sufficient strength or may corrode which can result in winch pulling off deck suddenly and unexpectedly during high loads causing severe injury or death.

### **NOTICE**

To mount winches on the deck, do not use countersunk bolts.

- D.** Fill the mounting holes with a suitable marine sealant.
- E.** Remove the excess adhesive/sealant from the holes and base drainage channels

F. Reassemble the winch following the steps of the **Procedure** in the reverse order, and apply the products indicated in the section on maintenance.

## NOTICE

Before closing the winch, make sure the holes and drainage channels in the base of the winch are not obstructed.

### Positioning the self-tailing arm

Position the self-tailing arm so that the line leaving the winch is led into the cockpit.

## Maintenance

---

### Washing

Winches must be washed frequently with fresh water, and in any case after each use.

Do not allow teak cleaning products or other cleaners containing caustic solutions to come into contact with winches and especially anodised, chrome plated or plastic parts.

Do not use solvents, polishes or abrasive pastes on the logos, on the stickers on the winches or on any anodized, chrome plated and plastic surfaces.

Make sure that the holes and drainage channels in the base of the winch are not obstructed so that water does not collect.

### Maintenance table

Winches must be visually inspected at the beginning and end of every season of sailing or racing.

In addition they must be completely overhauled, cleaned and lubricated at least every 12 months.

After an inspection, replace worn or damaged components. Do not replace or modify any part of the winch with a part that is not original.



## WARNING!

Periodic maintenance must be carried out regularly. Lack of adequate maintenance shortens the life of the winch, can cause serious injury and also invalidate the winch warranty. Installation and maintenance of winches must be carried out exclusively by specialized personnel.

In the case of doubt contact Harken® Tech Service at [techservice@harken.it](mailto:techservice@harken.it)

### Disassembly procedure

#### *Tools needed*



One medium flat-bladed screwdriver

A number five hex key



Rags


To identify the various parts refer to the exploded view at the end of this Manual.

 Torque to be applied in assembly phase

Carry out procedure as shown in the paragraph on winch installation and then do the following:



6. Completely unscrew the three screws n° 27 and remove the stripper arm support n°22

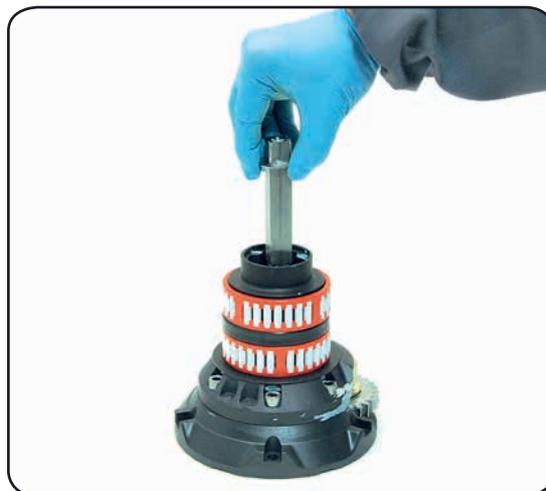

7. Slide out the central shaft n°20



9. Unscrew the 5 hex screws n°17  
( $\approx 20\text{Nm}/177\text{ in-lb}$ )



9. Remove the assy housing n°16  
Important: washer n°13 may remain inside the drum support!




10. Remove gear n°15



11. Remove washer n°13



12. Remove gear n°9 and remove the pawls n°7. To facilitate the operation press the spring against the pawl with a blade.

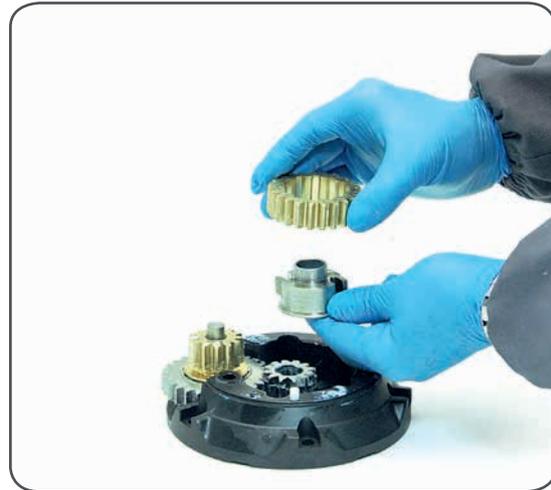

13. Slide off gear n°2



14. Remove the pinion n°10.



15. Slide off gear n°5



16. Remove the washer n°4.

If it is necessary to replace any **jaws** of the winch, proceed as follows:



I. Unscrew the 4 screws n°25  
( $\approx 4\text{Nm}/35\text{ in-lb}$ )



II. Remove the jaws n°24

Inspect balls inside the drum and carefully check the correct position; if it is necessary to put back any balls, push balls in the race (as shown below):



Once the winch is completely disassembled, clean the parts: use a basin of diesel oil to soak metal components and rinse plastic parts in fresh water. Once you have done this, dry the parts with cloths that do not leave residue.

Inspect gears, bearings, pins and pawls for any signs of wear or corrosion.

Carefully check the teeth of gears and ring gears to make sure there are no traces of wear.

Check the roller bearings and check there are no breaks in the bearing cages.  
Replace worn or damaged components.

Carry out maintenance on components using the products listed below.

For more information on which products to use where, refer to the exploded diagram below.

Use a brush to lightly lubricate all gears, gear pins, teeth and all moving parts with grease.  
Lightly lubricate the pawls and springs with oil. Do not use grease on the pawls!




## Assembly

Make sure that the holes and drainage channels in the base of the winch are not obstructed. Assemble the winch in the reverse order of the sequence in the section on disassembly.


To tighten bolts, use the torque indicated in the disassembly procedure.



If the jaws have been disassembled, insert peeler between the two jaws, taking care that the letters TOP on the peeler are facing upwards.

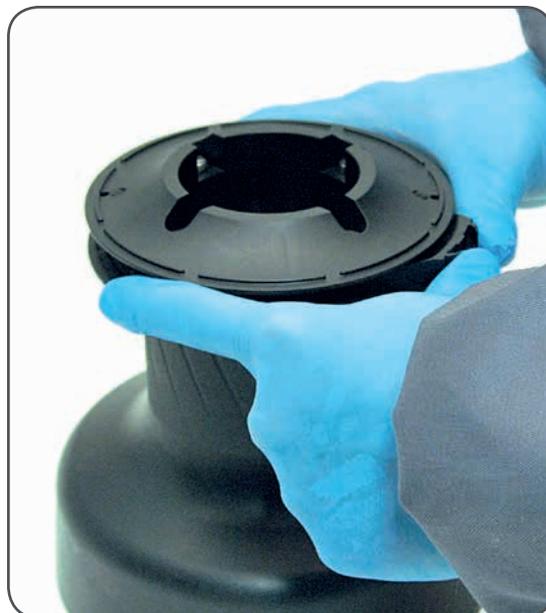

When positioning the stripper arm, align the peeler with it.

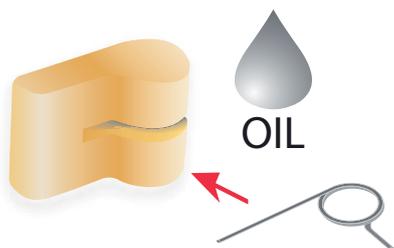

### **To assemble the pawls:**

correctly position the spring in its housing as shown at left. Hold the spring closed and slide the pawl into its housing. Once in position, check that the pawls can be easily opened and closed with a finger.

In case of doubt concerning the assembly procedure contact Harken® Tech Service: [techservice@harken.it](mailto:techservice@harken.it)

## Harken® limited worldwide warranty

Refer to the Harken® Limited Worldwide Warranty in the Harken® Catalogue and on the website [www.harken.com](http://www.harken.com)

## Ordering spare parts

Spare parts can be requested from Harken® as described in the Harken® Limited Worldwide Warranty, indicating the part number in the Parts List and including the serial number of the winch for which the parts are required.

***The serial number of the winch is printed on a plate on the drum support of the winch.***



### Manufacturer

#### **Harken® Italy S.p.A.**

Via Marco Biagi, 14  
22070 Limido Comasco (CO) Italy  
Tel: (+39) 031.3523511  
Fax: (+39) 031.3520031  
Email: [info@harken.it](mailto:info@harken.it)  
Web: [www.harken.com](http://www.harken.com)


- **Tech Service**  
Email: [techservice@harken.it](mailto:techservice@harken.it)
- **Customer Service**  
Tel: (+39) 031.3523511  
Email: [info@harken.it](mailto:info@harken.it)


### Headquarters

#### **Harken®, Inc.**

1251 East Wisconsin Avenue  
Pewaukee, Wisconsin 53072-3755 USA  
Tel: (262) 691.3320  
Fax: (262) 691.3008  
Email: [harken@harken.com](mailto:harken@harken.com)  
Web: [www.harken.com](http://www.harken.com)

- **Tech Service**  
Email: [technicalservice@harken.com](mailto:technicalservice@harken.com)
- **Customer Service**  
Tel: (262) 691-3320  
Email: [customerservice@harken.com](mailto:customerservice@harken.com)

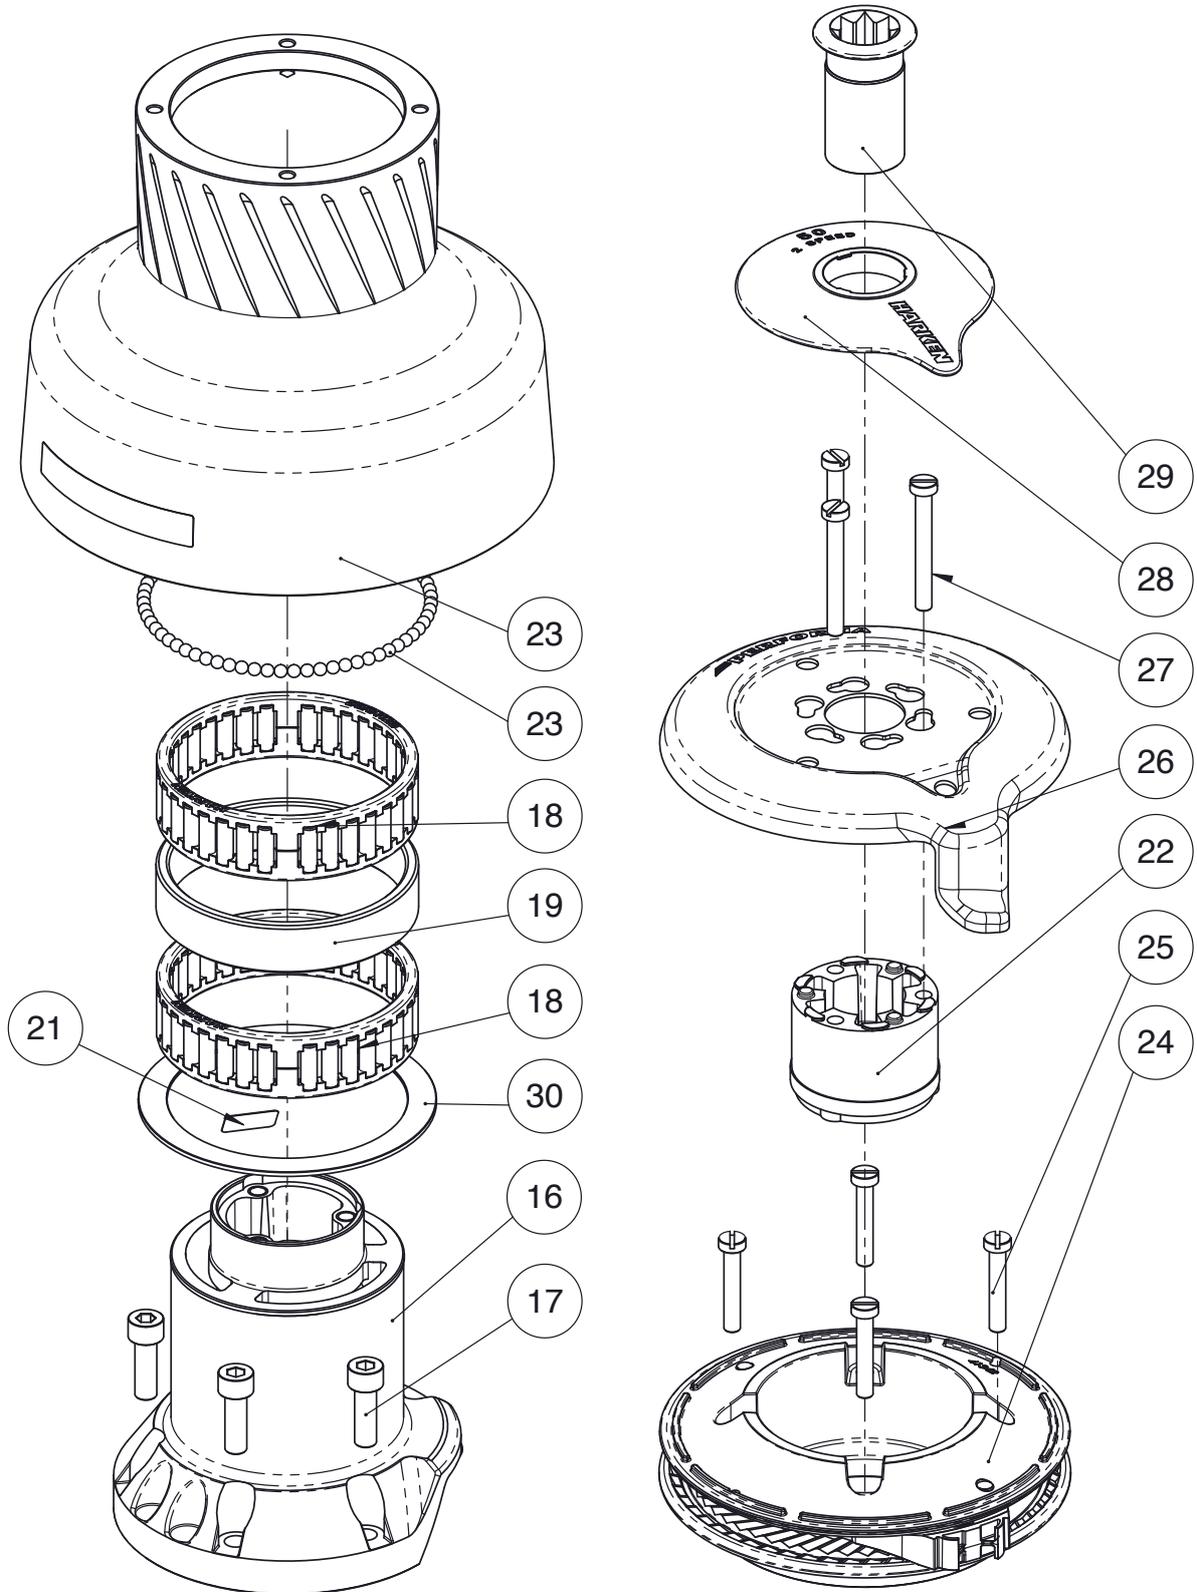

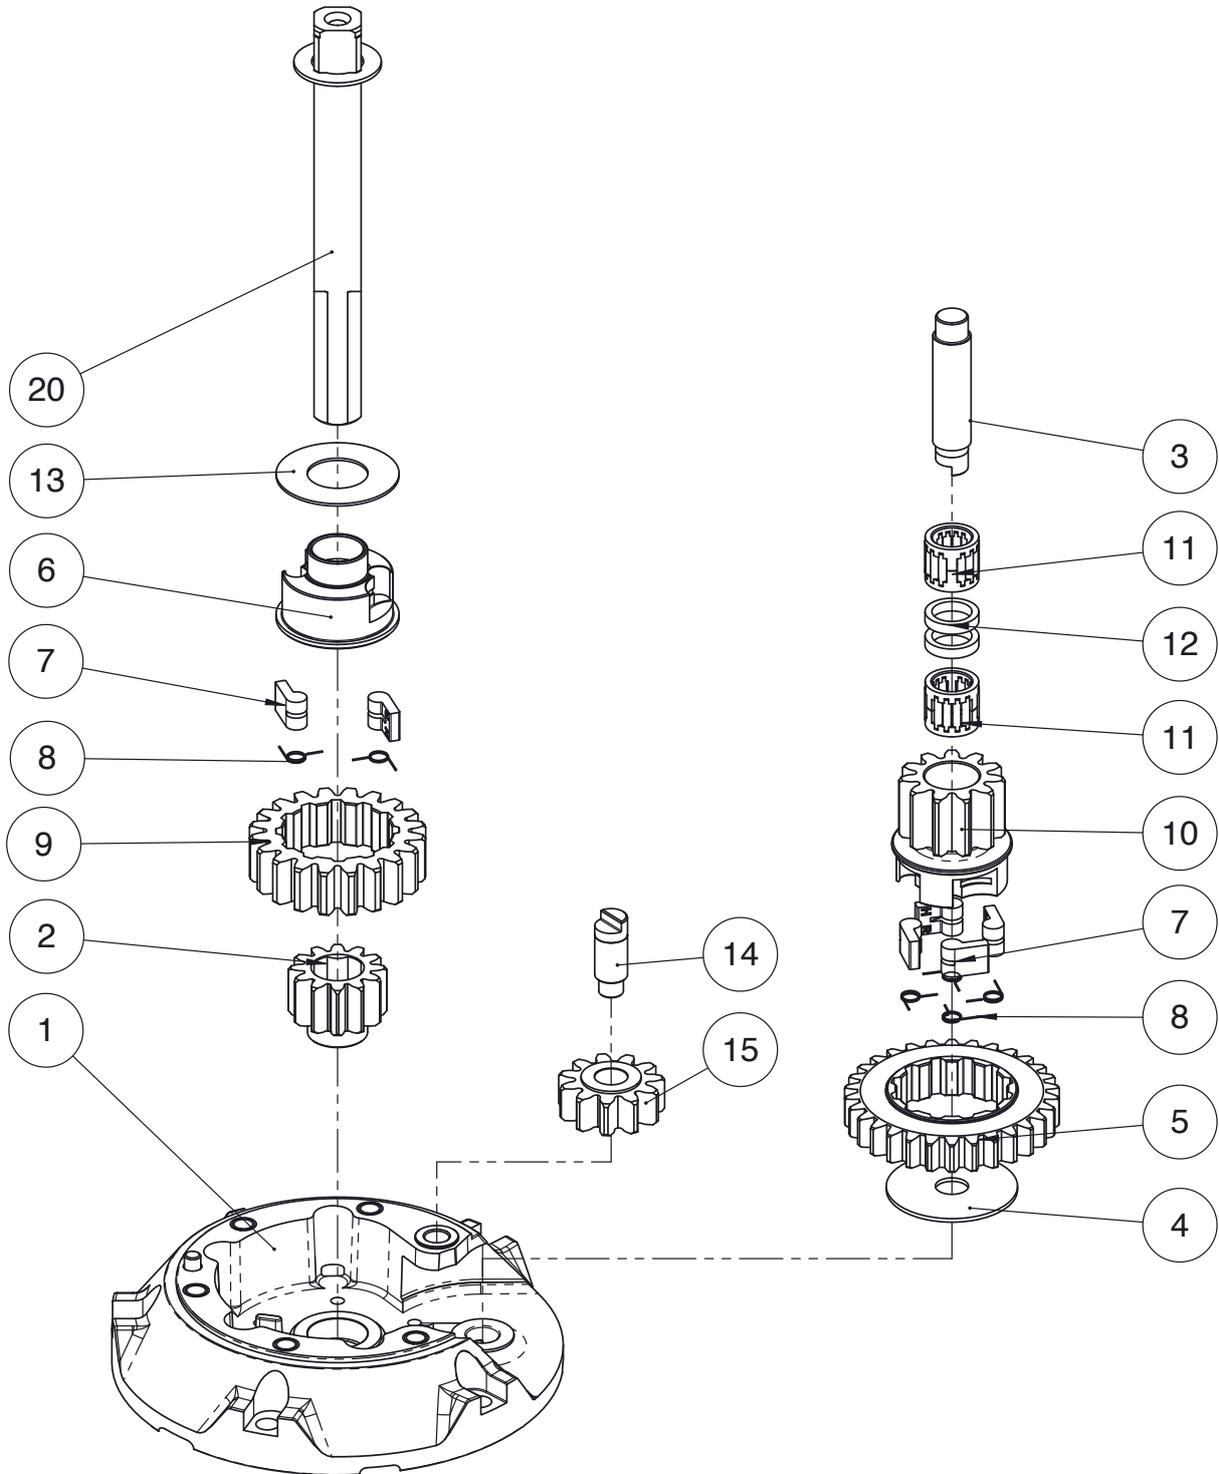

## Performa Winch 50.2 STP

| Pos | Q.ty | Code       | Description  | Pos | Q.ty | Code       | Description  |
|-----|------|------------|--|-----|------|------------|--|
| 1   | 1    | A96633400  | PERFORMA Assy Base Winch 50<br><i>PERFORMA Base W50<br/>Heli-coil M8x10<br/>Roller Ø6x19<br/>Bushing Ø22xØ25x9.5<br/>Bushing Ø9xØ11x7<br/>Bushing Ø12xØ14x11</i> | 17  | 5    | M0606303   | Screw M8x25 UNI 5931   |
|     | 1    | S413350080 |  | 18  | 2    | A74135100  | Bearing Ø85xØ97x26   |
|     | 1    | S4152300A7 |  | 19  | 1    | S413520080 | Spacer   |
|     | 1    | S414890080 |  | 20  | 1    | A94142200  | Assy Central Shaft W50<br><i>Central shaft W50 ST<br/>Washer Ø17.2xØ32x1.5</i>   |
|     | 1    | S413330085 |  |     | 1    | S413880002 |  |
| 2   | 1    | S413020004 | Gear Z12   | 21  |      |            | Winch Serial Number Sticker  |
| 3   | 1    | S416050004 | Pin  | 22  | 1    | S4129400A0 | Stripper arm support   |
| 4   | 1    | S278170002 | Washer Ø12.5xØ48x1.5   | 23  | 1    | A96572400  | Performa W50 Drum<br><i>Performa Drum W50<br/>Ball 3/16"<br/>Performa Bearing ring W50<br/>Winch Product Sticker**</i> |
| 5   | 1    | S412800041 | Gear Z30   |     | 68   | M0619580   |  |
| 6   | 1    | S414260004 | Pawls Carrier Ø8xN2  |     | 1    | S6573100A3 |  |
| 7   | 6    | S000090004 | Pawl Ø8*   | 24  | 1    | A96589600  | Performa Assy Jaws W50<br><i>Lower Jaw W50<br/>Performa Upper jaw W50<br/>Peeler W46 - 50<br/>SPRING</i>               |
| 8   | 6    | S000380001 | Pawl Spring Ø8*  |     | 1    | S414280080 |  |
| 9   | 1    | S415590041 | Gear Z20   |     | 4    | S385970001 |  |
| 10  | 1    | S415610004 | Pinion Z11   | 25  | 4    | M0601803   | Screw UNI EN ISO 1207:1996 - M6x35 - A4  |
| 11  | 2    | A72821800  | Roller Bearing Ø14xØ20x18  | 26  | 1    | S657400019 | Performa Black Stripepr Arm W50  |
| 12  | 2    | S281340080 | Spacer roller bearings   | 27  | 3    | M6007103   | Screw M6x50 UNI6107  |
| 13  | 1    | S413120002 | Washer Ø22.5xØ45x1   | 28  | 1    | S4134500A5 | Cover 2 speed W50  |
| 14  | 1    | S413070004 | Pin Ø9xØ12x32.5  | 29  | 1    | A94136400  | Assembly Socket W20-80<br><i>Socket Handle W20/80<br/>Washer Ø7.7xØ25x5.8<br/>Screw M8x20 UNI 6109</i>                 |
| 15  | 1    | A94156000  | Assy Gear Z11<br><i>Gear Z11<br/>Bushing Ø12xØ14x8</i>   |     | 1    | S415130085 |  |
|     | 2    | S414900080 |  |     | 1    | M0614303   |  |
| 16  | 1    | A94134800  | Assy Housing Winch 50<br><i>Housing Winch 50<br/>Heli-coil M6x9<br/>Bushing Ø12xØ14x8<br/>Bushing Ø12xØ14x11<br/>Bushing for support</i>                         | 30  | 1    | S657320052 | Performa Shim W50  |

\*Available with service kit; see website [www.harken.com](http://www.harken.com)

\*\*Winch product sticker

